



JORDANVALVE

3170 Wasson Road • Cincinnati, OH 45209 USA
Phone 513-533-5600 • Fax 513-871-0105
info@richardsind.com • www.jordanvalve.com

I & M Mark 58/586 (Air Loaded) Series

*Installation & Maintenance Instructions for
Mark 58/586 Back Pressure Regulating & Relief Valve*

Warning: Jordan Valve back pressure regulators must only be used, installed and repaired in accordance with these Installation & Maintenance Instructions. Observe all applicable public and company codes and regulations. In the event of leakage or other malfunction, call a qualified service person; continued operation may cause system failure or a general hazard. Before servicing any valve, disconnect, shut off, or bypass all pressurized fluid. Before disassembling a valve, be sure to release all spring tension.

Please read these instructions carefully!


Your Jordan Valve product will provide you with long, trouble-free service if it is correctly installed and maintained. Spending a few minutes now reading these instructions can save hours of trouble and downtime later. When making repairs, use only genuine Jordan Valve parts, available for immediate shipment from the factory.

Ideal Installation


1. To protect the valve from grit, scale, thread chips, and other foreign matter, all pipe lines and piping components should be blown out and thoroughly cleaned before the valve is installed.
2. Shutoff valves, pressure gauges, and bypass piping should be installed as indicated in the diagram to provide easier adjustment, operation, and testing.
3. A line strainer should be installed on the inlet side of the regulator to protect it from grit, scale and other foreign matter. A 0.033 perforated screen is usually suitable. Line strainers are available from Jordan Valve.

4. For best control, 3'0" straight sections of pipe should be installed on either side of the valve.
5. Install the regulators in the highest horizontal line of piping to provide drainage for inlet and outlet piping, to prevent water hammer, and to obtain faster regulation.
6. The regulator may be installed in a flow-through manner as in Figure 1 or into a tee off of the main line (with one port plugged) as shown in Figure 2. Flow may be in either direction through the body of the regulator. Bypassed fluid exits out of the bottom bypass port.
7. In hot vapor lines, upstream and downstream piping near the regulator should be insulated to minimize condensation.
8. Expand the outlet piping at least one pipe size if the outlet pressure (downstream) is 25% of the inlet pressure or less. As standard tapered expander connected to the outlet of the regulator is recommended. Minimizing bypass piping length and number of elbows will improve valve performance by reducing pressure buildup.
9. Where surges are severe, a piping accumulator is recommended.

Ideal Installation

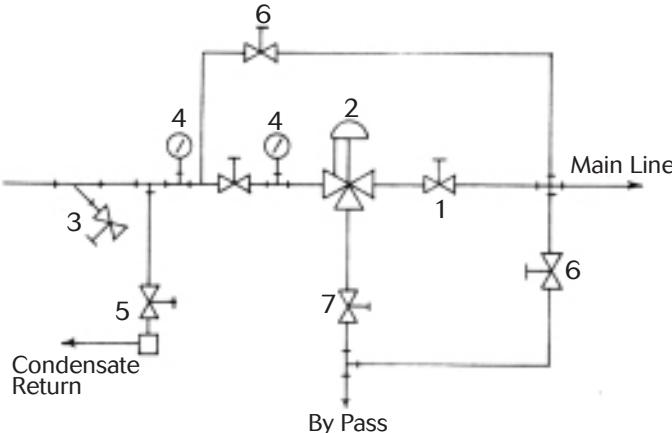

- 1 Inlet shut-off valve
2 MK 58 BPRV
3 Strainer and Drain Valve
4 Pressure Gauge
5 Steam trap and valve
6 Manual bypass valve
7 Bypass shut-off valve
8 Pipe plug

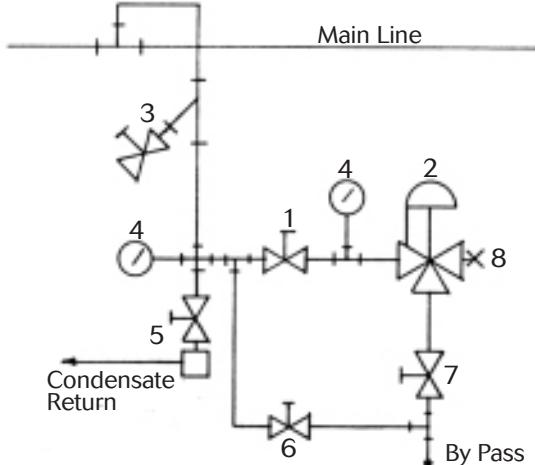

Start-up Procedure

With the inlet and outlet shut-off valves closed:

1. Throttle the manual bypass valve so that the pressure to be controlled is maintained near the set point.
2. Slowly open the inlet shut-off valve.
3. Open the outlet shut-off valve.
4. Slowly close the bypass valve, but do not close it fully until you are certain that the regulator has control of the system.
5. To change the controlled pressure, turn the adjusting screw clockwise to increase pressure, counter-clockwise to decrease pressure.

WARNING:

6. Never substitute a longer length adjusting screw. Personal injury and damage to the valve may result.

Troubleshooting

Erratic Control:

1. Oversizing causes cycling and hunting and reduces the rangeability of the valve. Make certain that your sizing is correct.
2. Steam traps downstream may need attention.
3. Safety valve may be jammed open.
4. Excessive foreign matter on seats or plug (4*). Clean them. Inspect seating surface on plug for deterioration.
5. Valve plug may not be moving freely. Check cage bore (2).
6. Surges in piping system.
7. Check accumulator.

Will not operate:

1. Diaphragm ruptured. Replace.
2. Adjusting spring broken. Replace.
3. Improper spring setting. Reset.

Maintenance

Warning:

Be sure that there is no pressure in the valve before loosening any fittings or joints. The following steps are recommended.

1. Close the inlet shut-off valve.
2. Back off adjusting screw to allow inlet pressure to open seats.
3. Allow pressure to bleed off through downstream piping.
4. When inlet pressure gauge indicates no pressure in the line, close the outlet shut-off valve.
5. Valve may now be removed or serviced.

* Refer to the drawings for the proper orientation of the parts and for proper nomenclature.

Plug Removal & Diaphragm Replacement

1. Remove all pressure from the line as outlined under Warning.
2. Remove the compression of the adjusting spring (11) by rotating the adjusting screw (14) counter-clockwise.
3. Remove the spring housing (9). Remove spring (11), spring seat (12) and ball bearing (13).
4. Remove the diaphragm assembly. The diaphragm assembly consists of the upper diaphragm plate (8), diaphragm washer (7), washer (6), stem (5) and plug (4). The plug is attached loosely to the stem. DO NOT DROP.
5. Secure the upper diaphragm plate in a vise. Use a wrench on the stem and turn counter-clockwise to remove.
6. Remove the diaphragm, clean the parts and install the new diaphragm in reverse order. The radius edge of the washer goes against the diaphragm. Clean and degrease the stem threads and apply one drop of #290 Loctite to them before threading the stem into the diaphragm plate. When an elastomer diaphragm is used, thread the parts together hand tight and then tighten 1/4 turn. When a metal diaphragm is used, pull the parts up together tight.
7. Clean the diaphragm seating surfaces on the spring housing (9) and on the body (1). Remove adjusting screw (14).
8. Unscrew the cage (2) approximately two turns. Place the plug, diaphragm assembly, spring, spring seat and ball bearing back into the valve body. (Metal diaphragms nest into the counterbore in the body). Do not lubricate the plug.
9. Install spring housing.
10. Check to see that ball is below the tapped hole for the adjusting screw and reinstall adjusting screw to contact ball.
11. Tighten bolts (10) evenly per chart on next page.
12. Thread cage back into the body and pull up snug. Readjust adjusting screw.


Cage Removal

1. Remove all pressure from the line as outlined under Warning.
2. Remove the compression of the adjusting spring (11) by rotating the adjusting screw (14) counter-clockwise.
3. Turn the hex end on the cage (2) counter-clockwise and remove it from the body. The o-ring (3) which is used to seal the cage to the body main remain on the cage or stay in the body when you remove the cage.
4. Place the cage in a vise and grip it on the hex to prevent damage to machined surfaces. The plug will


remain with the stem. To remove plug see preceding section.

5. Inspect parts for wear and replace as required. It is recommended that the o-ring be replaced.
6. Clean all parts and the o-ring seating surfaces in the body and on the cage. Lightly lubricate these surfaces and the o-ring. Do not lubricate bore of cage where the plug operates.
7. Check to see that the ball (13) is below the tapped hole for the adjusting screw and reinstall the adjusting screw to just contact the ball.
8. Install the cage o-ring and screw the cage into the body until it bottoms out and tighten. Readjust adjusting screw.

Torque Procedure

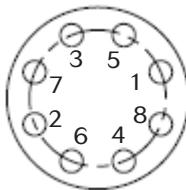

8-bolt Pattern

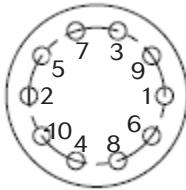

10-bolt Pattern

1. Install all bolts hand-tight.
2. Torque the bolts in order of the bolt pattern to a value equal to 1/4 of the recommended torque value.
3. Retorque each bolt to recommend value using the same bolt pattern as shown.


Torque Chart			
Connection	Valve Size	BRZ Body	DI, CS or SS Body
[Cap Screws (10)] Cage (2) to Body (1)	1/4" - 1/2"	140 in-lb	200 in-lb
	3/4" - 1"	140 in-lb	200 in-lb
	1 1/4" - 2"	140 in-lb	200 in-lb
Spring Housing (9) to Body (1)	1/4" - 2"	200 in-lb	200 in-lb

Ordering Spare Parts

When ordering spare parts, first make a note of the following information on the valve's nameplate:

- Serial Number
- Model and Size
- Body Material and End Connections
- Range

Cross Section View

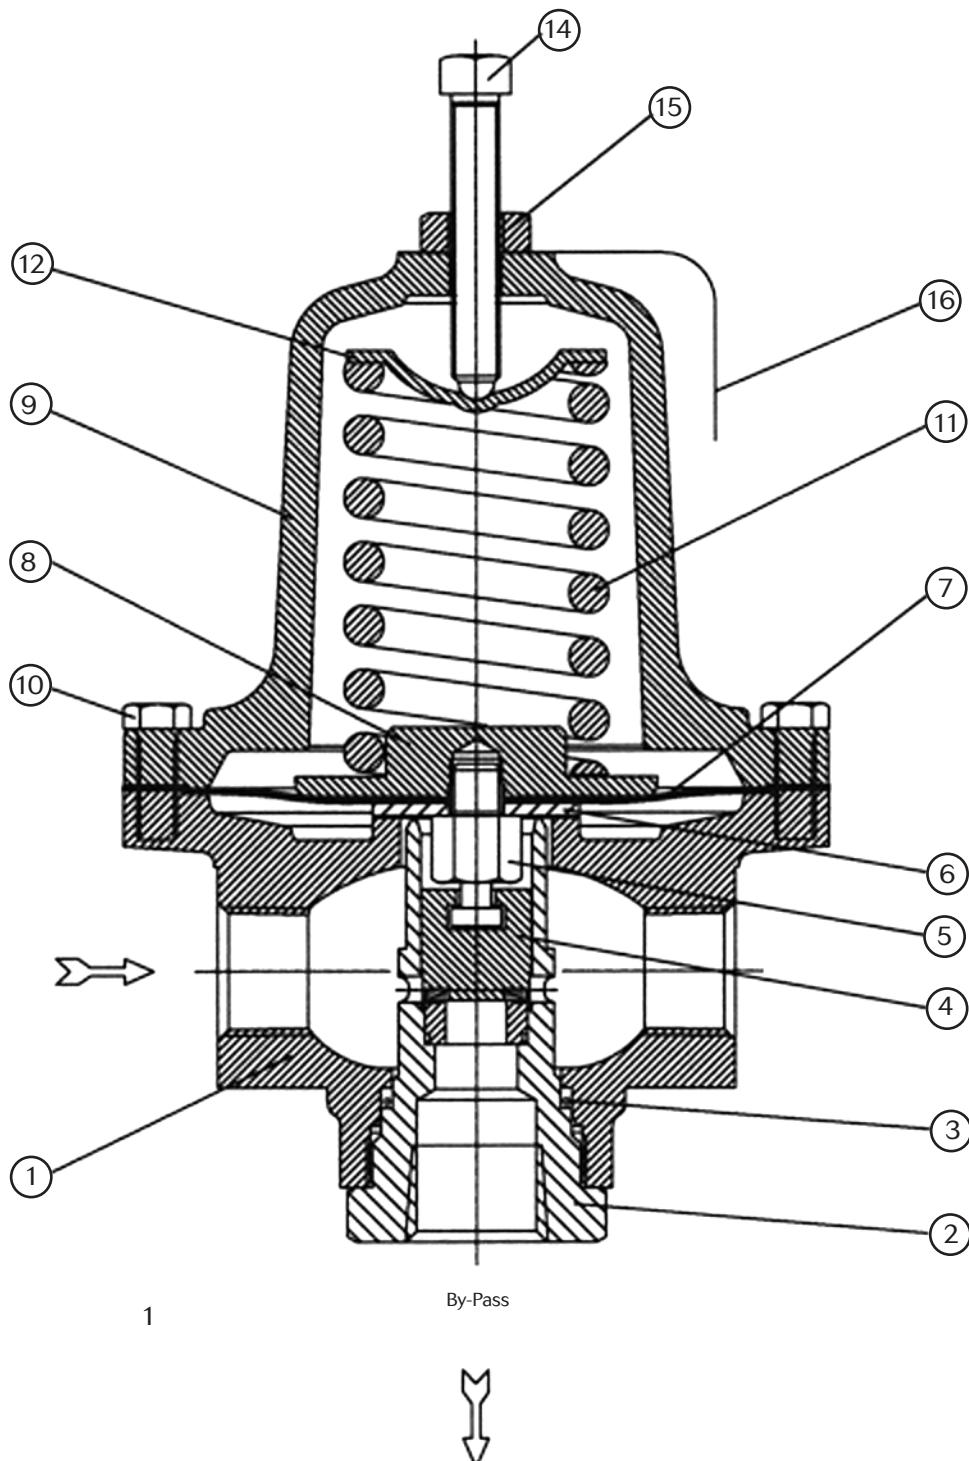

Item	Description
1	Body
2	Cage Sub-Assembly*
3	O-Ring
4	Plug
5	Stem
6	Washer
7	Diaphragm
8	Upper Diaphragm Plate
9	Spring Housing
10	Cap Screw
11	Range Spring
12	Spring Seat
14	Adjusting Screw
15	Jam Nut
16	Name Plate

* Consists of seat, seat o-ring, and cage

 **JORDANVALVE**

Bulletin IM-MK58-0521

3170 Wasson Road • Cincinnati, OH 45209 USA
 Phone 513-533-5600 • Fax 513-871-0105
info@richardsind.com • www.jordanvalve.com