



BYPASS INSTALLATION

A common problem encountered when using positive displacement pumps is continually increasing head pressure and brake horsepower. That occurs when these pumps operate at low flows, or against a closed discharge. High pressures of this type require the installation of a bypass valve in the system to prevent serious over-pressure, or over temperature, conditions from occurring.